



# LeapFrog LeapTV Controller Joy Stick Replacement

This is the process to replace the joy stick on the controller of the LeapFrog LeapTV controller.

Written By: Joshua Jones



## INTRODUCTION

This guide will show you how to replace the joy stick on the controller.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Small Plastic Spudger](#) (1)
-

## Step 1 — Battery



- Use the Metal Spudger to push the release clip on the battery cover.

## Step 2




- Lift the cover off.

## Step 3



- The battery holder is now visible with the removal of the cover.

## Step 4 — Controller Joy Stick

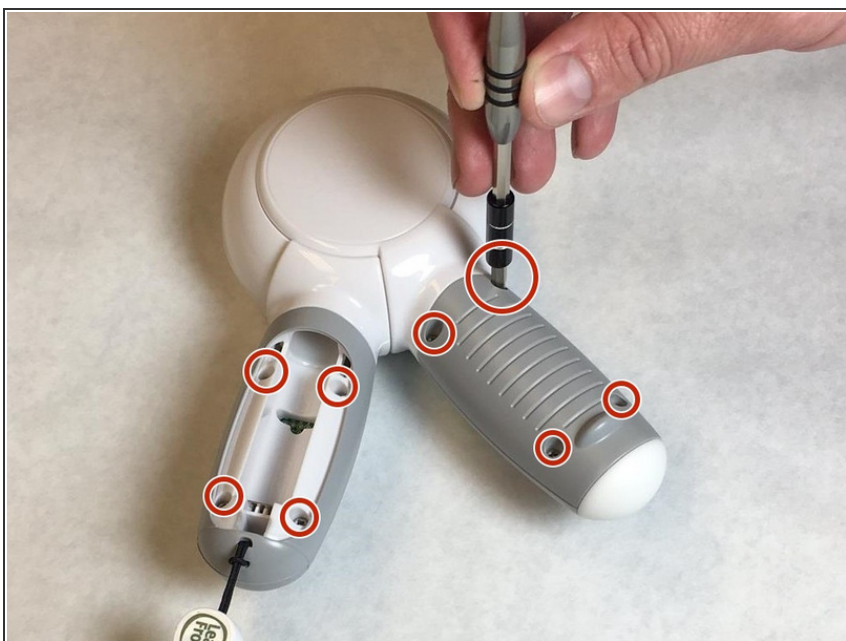

- Use the screwdriver to remove the eight 8.7 mm PH1 Phillips head screws.



## Step 5



- Separate the top and bottom parts of the controller slightly.

## Step 6



- Slide the cover on the back side of the controller covering the joy stick out of the way.

## Step 7




- Use the screwdriver to remove the four 8.7 mm PH1 Phillips head screws.

## Step 8



- Turn and lift the circuit board with button attached out of the hole. Do not detach the circuit.

## Step 9

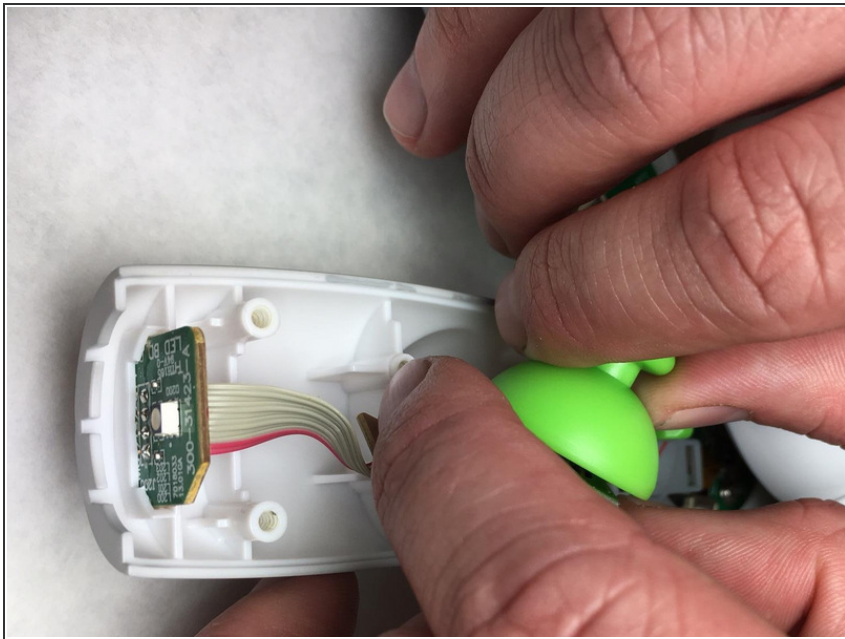

- Hold the circuit board and button and pull the button off.

## Step 10



- Joystick will now pop off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-27 01:33:56 PM.